

DIP SWITCH(S1)

- 1 - SERVICE
- 2 – REMOTE CONTROL MODE
- 3 – REPAIRING MODE
- 4 – NO USE

S2 – RESET TO FACTORY SETTING

D3 D4 – INDICATOR LIGHT

OPERATION MANUAL:

(1) SWITCH BY REMOTE CONTROL

1. FIRST PUT THE DIP SWITCH 1/2/3 TO OFF POSITION
2. WHEN “A” GAME CARD IS WORKING, PRESS (10+PASSWORD+12),THE FACTORY PASS WORD IS 1111,IF PASSWARD CORRECT,THEN SCREEN WILL SWITCH FROM A TO B,WILL BEEP ONE TIME AND D3 INDICATOR LIGHT ON ONE SECOND; IF PASSWORD WRONG,WILL BEEP TRIPLE TIME AND D3 INDICATE LIGHT FLASH TRIPLE TIME.
3. THE ABOVE OPERATION NEED TO BE DONE WHIHIN 10 SECONDS,OTHERWIDE NEED TO REDO AGAIN.
4. WHEN THE SCREEN IS UNDER “B” GAME CARD,HOLD THE BUTTON 12 FOR 2 SECONDS,THEN WILL SWITCH BACK TO “A” GAME CARD.

CHANGE PASSWORD:

1. PUT THE DIP SWITCH 2 TO ON POSITION
2. FIRST IDENTIFY OLD PASSWORD,PRESS(OLD PASSWORD+12),IF CORRECT,WILL BEEP ONE TIME,AND D3 INDICATE LIGHT ON ONE SECOND,THEN CAN ENTER THE NEW PASSWORD(NEW PASSWORD+12+NEW PASSWORD+12),IF RESET SUCCEED,WILL BEEP ONE TIME AND D3 INDICATE LIGHT ON ONE SECOND. PASSWORD RESET COMPLETE.
3. IF PASSWORD WRONG,WILL BEEP TRIPLE AND D3 INDICATE LIGHT FLASH TRIPLE,NEED TO RE-IDENTIFY OLD PASSWORD.
4. WHEN RESET COMPLETE,NEED TO PUT THE DIP SWITCH 3 BACK TO OFF POSITION.

BACK TO FACTORY SETTING:

BEFORE CONNECT TO EDGE CONNECTOR OF MACHINE,HOLD S2 BUTTON,THEN CONNECT TO EDGE CONNECTOR,WILL HEAR BEEP ONE TIME AND LONG,THEN RETURN TO FACTORY SETTING.