
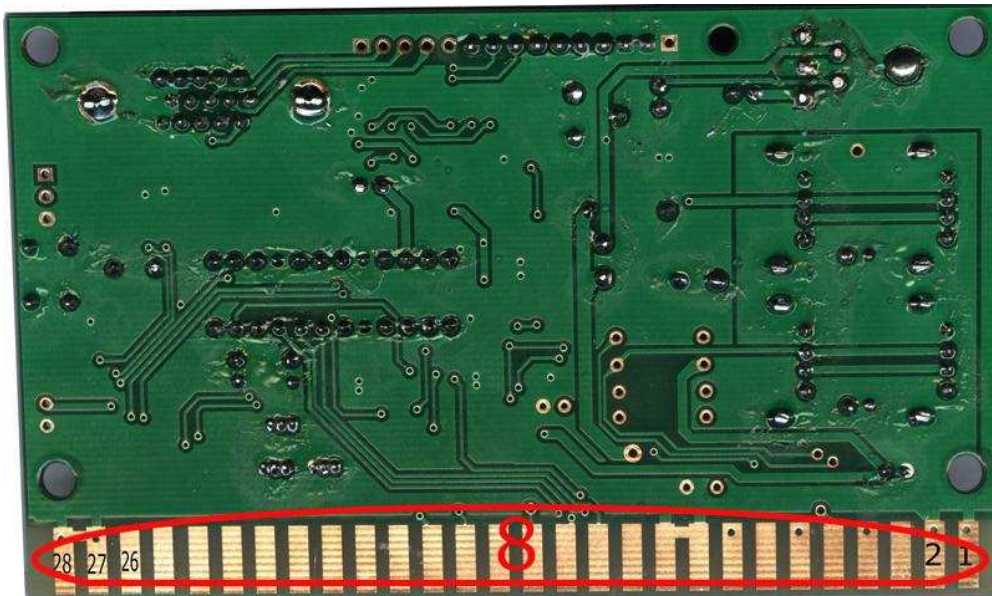


X3HW-035 USER Manual

Xbox 360 VGA arcade timer board is a Converts Xbox 360 as coin operation arcade game system.

Please check the fellow info before use it , thanks:

Need connect power supply/start button/Coin choice adapter , then it can work. Please connect as the fellow pic.

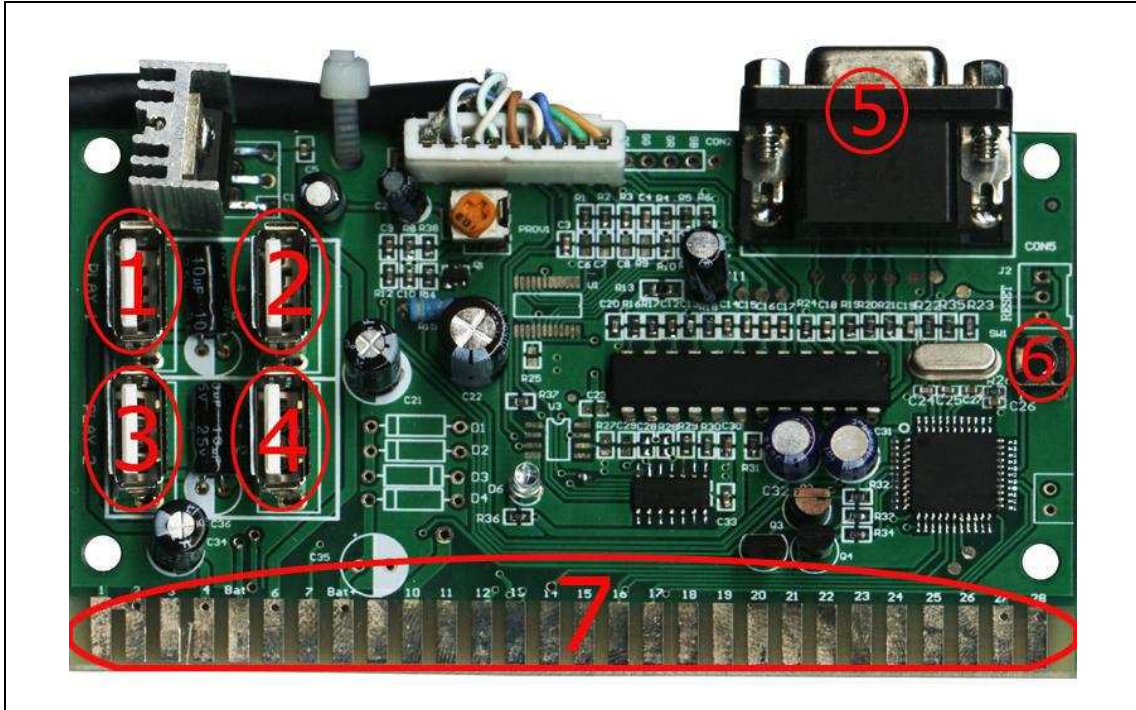

- ① Player controller 1 output
- ② Player controller 1 input
- ③ Player controller 2 output
- ④ Player controller 2 input
- ⑤ VGA Output

⑥ Menu Setting

⑦ For Power & Player 1 start etc ,please check the sheet:

1	GND	11	Unused	21	Unused
2	GND	12	Red Signal Out	22	Unused
3	Unused	13	Blue Signal Out	23	Unused
4	+5V	14	Unused	24	Unused
5	NC	15	Unused	25	Unused
6	+12V	16	Coin Adapter 1	26	Unused
7	Unused	17	Play1 Start	27	GND
8	Unused	18	Unused	28	GND
9	Unused	19	Unused		
10	Audio Output	20	Unused		

⑧ For Player 2,please check the sheet:

1	GND	11	Unused	21	Unused
2	GND	12	Green Signal Out	22	Unused
3	Unused	13	Line sync signal output	23	Unused
4	+5V	14	Unused	24	Unused
5	NC	15	Unused	25	Unused
6	+12V	16	Coin Adapter 2	26	Unused
7	Unused	17	Play 2 Start	27	GND
8	Unused	18	Unused	28	GND
9	GND	19	Unused		
10	GND	20	Unused		

How to set the menu:

Press the ⑥ button , then will into the menu , then press Start 1 button to choice , and press Start 2 button to change it , when set all , please press the ⑥ button to exit the setting meun.

How to Play the game:

Put the coin into the coin adapter(coin adapter1 or coin adapter 2),on the screen will show the amount of coin ,then press the start 1 button ,then on the left of the screen will show the time ,then can play the game with controller 1(if press the start 2 button , then will play the game with controller 2).if use 2 controller to play the game ,please set it work on Share mode.